



FRESH FLOW

ELECTRIC MOP EM-180D

EN • Instruction manual


EN

CONTENTS

4	PRODUCT OVERVIEW
5	BEFORE USE
5	USE
5	CLEANING AND MAINTENANCE
6	TROUBLESHOOTING
7	PRODUCT SPECIFICATIONS
7	SUPPORT AND SPARE PARTS
7	RECYCLABILITY
7	GUARANTEE

PRODUCT OVERVIEW


EN

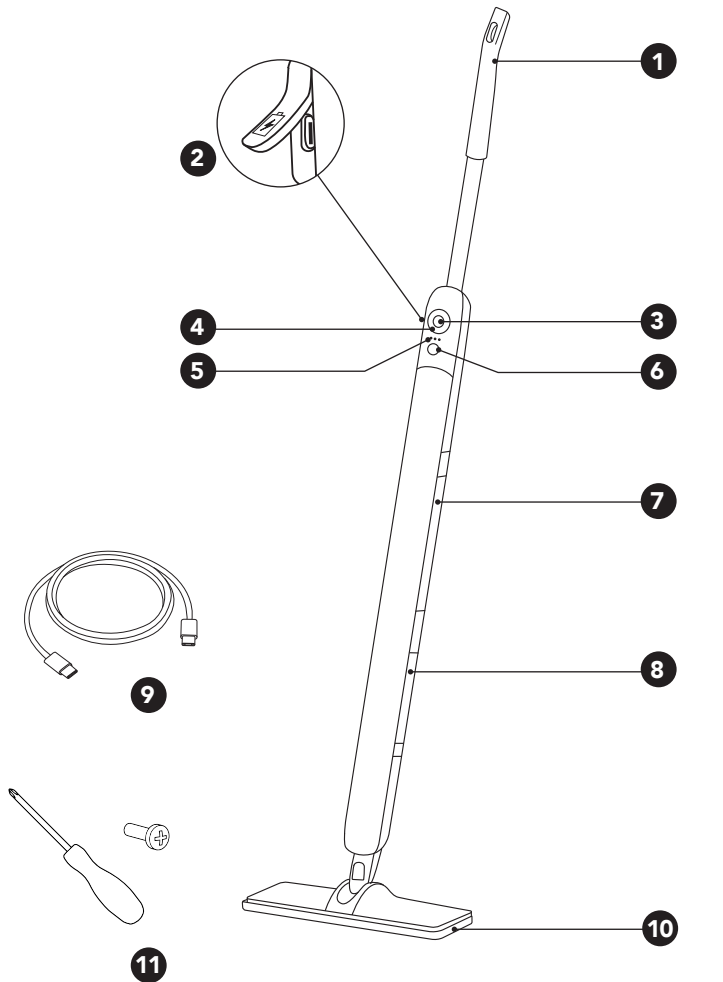

- | | | | |
|----|--------------------------|-----|-----------------------|
| 1. | Handle | 8. | Dirty water tank |
| 2. | Charging port | 9. | USB-C to USB-C cable |
| 3. | Mode button | 10. | Mopping pad |
| 4. | Mode indicator ring | 11. | Screwdriver and screw |
| 5. | Battery indicator lights | | |
| 6. | On/off button | | |
| 7. | Water tank | | |

BEFORE USE

- Insert the handle. Insert the included screw and tighten it with the included screwdriver.

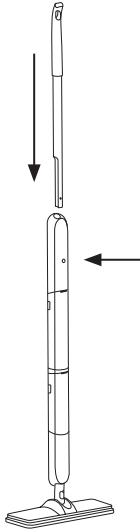


- Wet the mopping pad before placing it on the mop. **Do not twist the mopping pad!**



USE

- Remove the water tank by pulling it out. Lift the lid and fill the tank with clean water. Reinstall the lid and place it back into the mop.

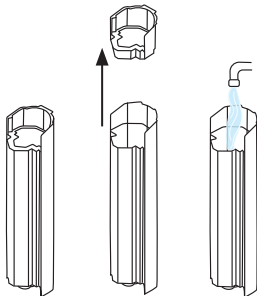

- Remove the dirty water tank, lift the lid and empty the tank. Rinse it with water and reinstall the lid before placing it back into the mop.
- Long press the on/off button for 1 second to start. Short press the button to turn it off.
- Press the mode button to change the programme. There are three programmes:
 - Regular programme - indicated by a light blue light.
 - Extra water programme - indicated by a dark blue light.
 - Water absorption only - indicated by a white light.
- Use a non-foaming detergent intended for similar products, such as robotic vacuum cleaners and other electric floor cleaners, in the water tank.

CLEANING AND MAINTENANCE

- Rinse the mop pad in water after use. Do not twist it, just press out excess water and let it air dry.
- Remove water from the water tank and the dirty water tank after use.
- Rinse the water tanks and lids, allow them to air dry before reinstalling.
- The mop pad can be cleaned in the washing machine on a 30 degree wool/ handwash-program. Be aware that machine wash and cleaning aids will add extra wear and tear on the mopping pad.
- Do not put the mop pad in the dryer.
- Before storing, ensure that the water tanks are dry.

EN

EN

Battery and charging:

- Use the included USB-C to USB-C cable for charging.
- When charging, the mode indicator ring flash light blue. When fully charged, it lights up steadily in light blue.
- The indicator lights indicate how much battery is left during use:

LIGHTS	BATTERY LEVEL	DESCRIPTION
○○○	71-100%	Three lights
●○○	31-70%	Two lights
●●○	21-30%	One light
●●○	Below 20%	One light flash red

TROUBLESHOOTING

Problem	Possible reasons	Solutions
The indicator lights are all solid red	Charging temperature too high.	Remove the charger and let the appliance cool down for 30 minutes.
The indicator lights all flashing red.	Operating temperature too high.	Switch off the appliance and let it cool down for 30 minutes.
The first and third indicator lights are flashing red.	Water pump malfunction.	Switch the product off. Charge it to 100%. Clean the water tank and refill with clean water. Try to restart the mop 5 times in a row with 10 seconds in between.
The first and second indicator lights are flashing red.	Drainage pump malfunction.	If this does not fix the problem, contact the store where you bought the product.

PRODUCT SPECIFICATIONS

5V = 5W MAX

Battery: 2600 mAh

Charging time 0-100%: 4.5 hours

Usage time: Up to 180 minutes

Regular mode:

16ml water flow/min $\pm$ 5ml/min

Extra water mode:

50ml water flow/min $\pm$ 5ml/min

Water absorption mode:

175ml water absorption/min $\pm$ 35ml/min

After connecting to the power supply, the appliance enters standby mode in less than 1 minute. The power consumption in standby mode is 0.18W.

SUPPORT AND SPARE PARTS

For support please visit us at wilfa.com, and see our customer service/support page. Here you will find frequently asked questions, spare parts, tips and tricks and all our contact information.

RECYCLABILITY



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling free of charge.



GUARANTEE

Wilfa issues a 5 year guarantee on this product from the day of purchase is done. The guarantee covers production failure or defects that arise during the guarantee period. Your purchase receipt works as proof towards retailer if claiming your guarantee.

The guarantee is valid only for products that are bought and used in private households. The guarantee is not valid if the product is used commercially. The guarantee is not valid if the product is misused, used by negligence, if not following instructions given by Wilfa, if modified or if unauthorized reparation is done. The guarantee is also not valid for normal wear of the product, misuse, lack of maintenance, use of wrong electrical voltage or:

- Overloading of product
- Parts which are normally worn down
- Parts you can expect being replaced regularly (e.g. filter, battery, mop etc.)

Instructions manual is also available at our [website wilfa.com](http://website.wilfa.com)

EN



BEYOND EXPECTATIONS

