


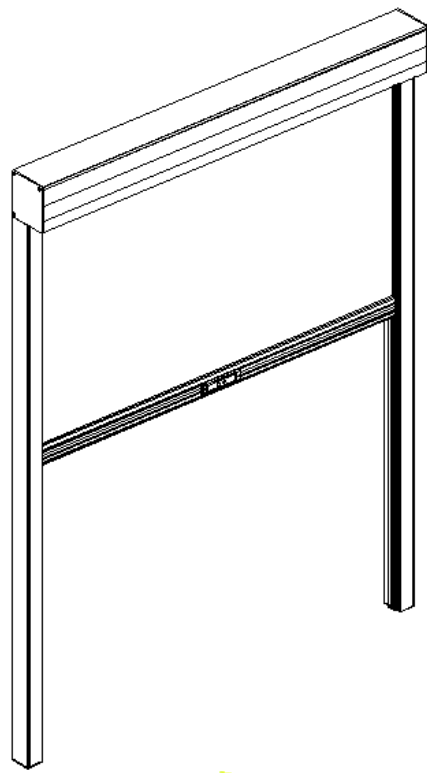


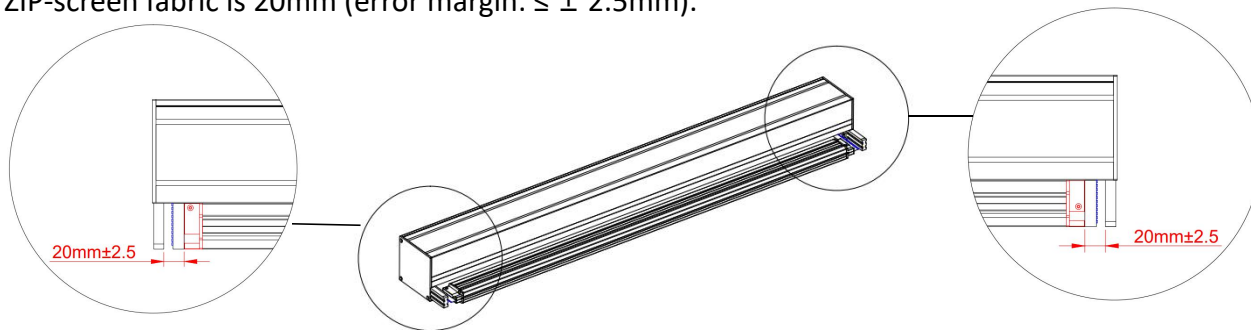
Manual Zip Blind Installation Manual





Manual Zip Blind Packing List		
Item	Accessories icon	Qty
Manual Zip Blind Main Body		1set
Manual Zip Blind Side Tracks		2pcs
Orbit Screw Hole Caps		8pcs
Manual		1set

1. Make sure that the position of the ZIP-screen fabric is centered

(1) Check whether the distance between the inner edge of the end cap and the outer edge of the ZIP-screen fabric is 20mm (error margin: $\leq \pm 2.5\text{mm}$).




(2) If one side does not meet the size standard (20 mm), pull out the ZIP screen completely and then adjust the fabric sideways so that it is centered.

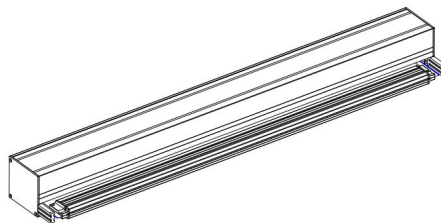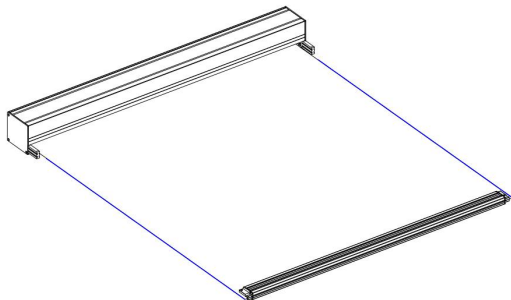


2. Combination Of Track And Zip Blind

(1) Unscrew the M4x25 hexagon socket screws on the tracks with a 3mm hexagon socket wrench and disassemble the tracks in turn.

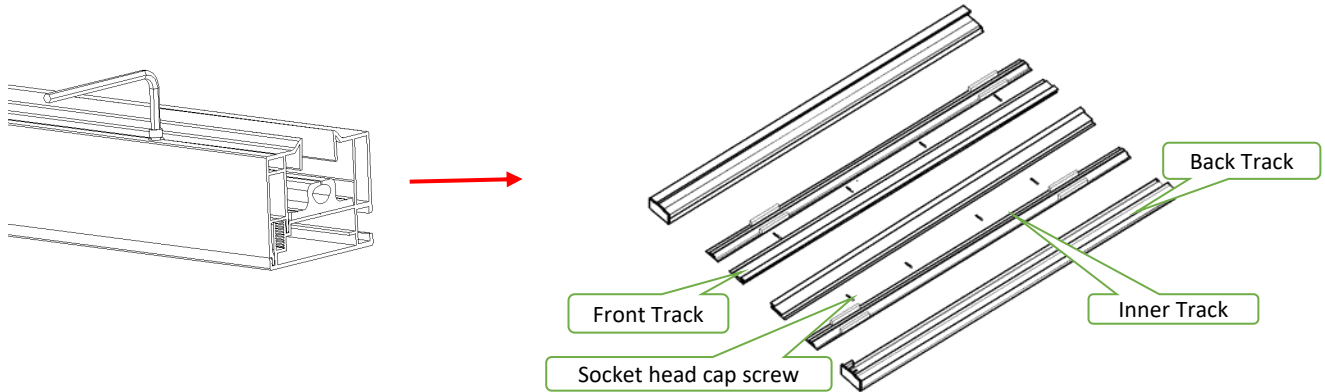


(2) Please differentiate left and right side tracks, the opening is facing forward.

① Insert the end plates on both sides of the main body into the back tracks.

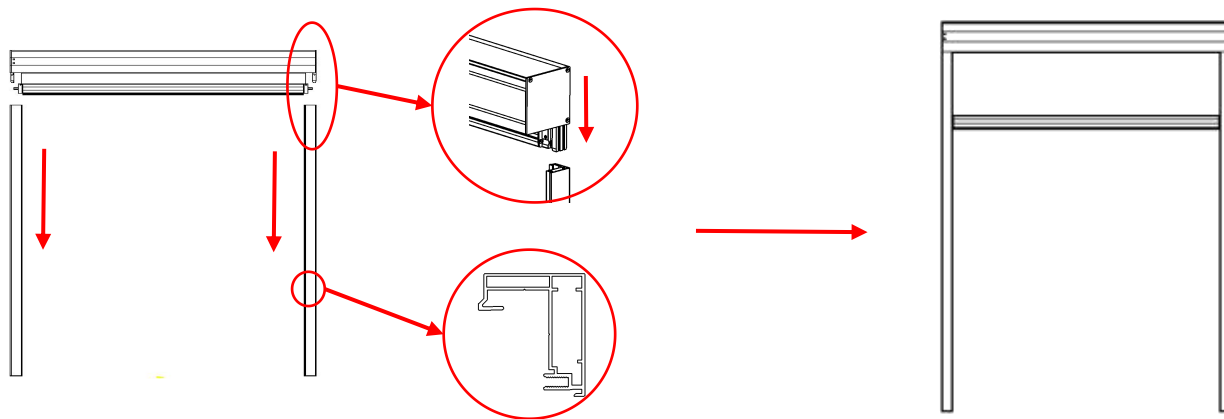


3. Install Zip Blind


(1) Move the wind curtain vertically to the position, and then fix the back tracks by M4 * 20 tail drilling screws.

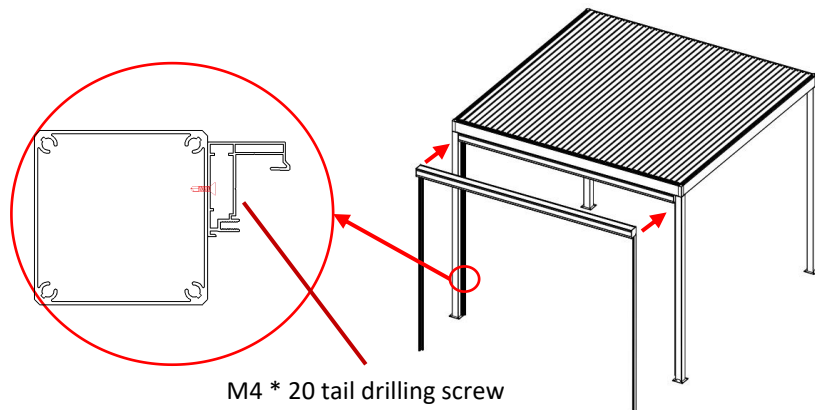


4.Ensure Correct Installation Of Both Side Tracks

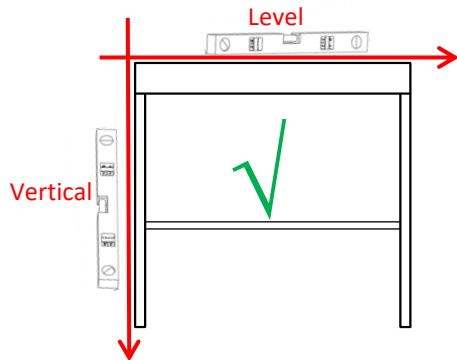

The distance between the upper and lower ends of the tracks is equal
Error $\leq 3\text{mm}$

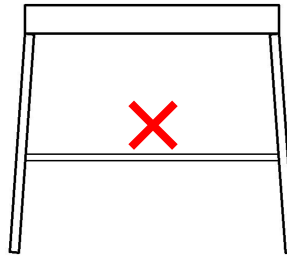



The distance between the lower ends of the track becomes wider

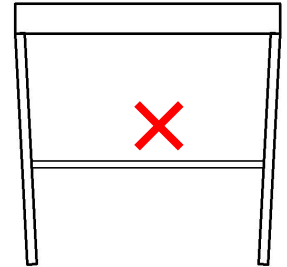



The distance between the lower ends of the track is narrowed

5.Insert The V-shaped Opening End Of The Plastic Inner Track Into The Fabric Zipper, And Install The Front Track


(1) Align one end of the V-shaped opening of the plastic inner track with the zipper and thread it in,in the process of inserting the zipper, align it. Do not pull it obliquely to avoid damaging the zipper.

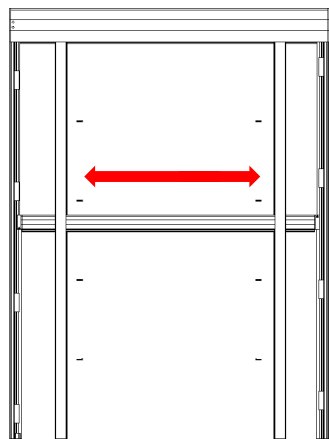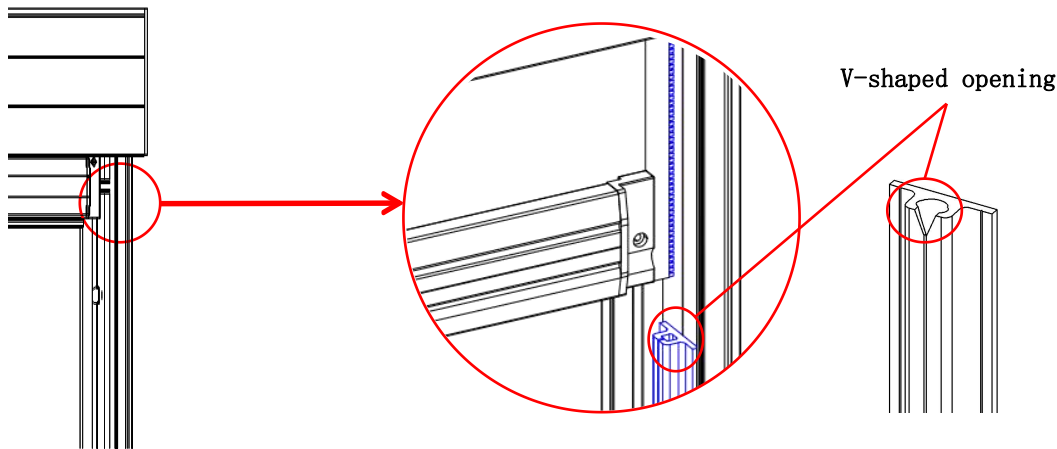


(2) Insert the front track into the back track, and screw on with the M4x25 socket head cap screws

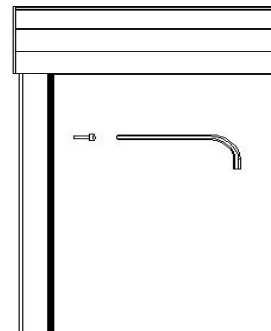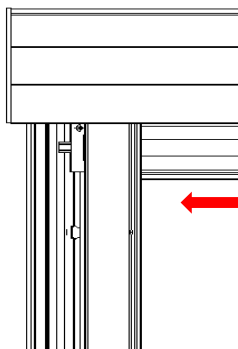


6. Check whether the buffer foam is totally inside the side track

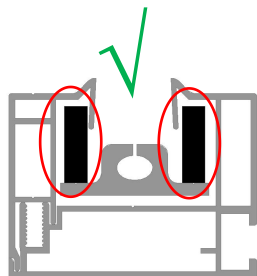

The buffer cotton is in the track groove

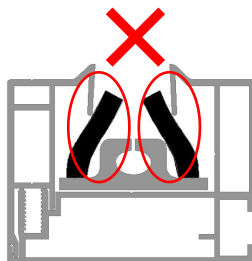


Buffer foam must be completely
Fit into track slot
Must not be exposed and clamped

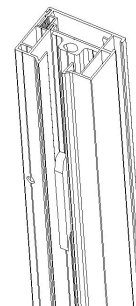


7. Installation finished, measuring the horizontal size from edge of top, middle and bottom

(The edge width error of the upper and lower ends of the rails on both sides should be less than or equal to 3mm, and the diagonal dimension error should be less than or equal to 5mm)

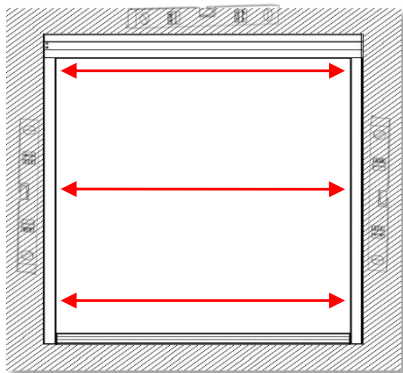

The above dimensions shall prevail, and the error between the middle and lower dimensions and the upper dimension shall not be greater than 3mm

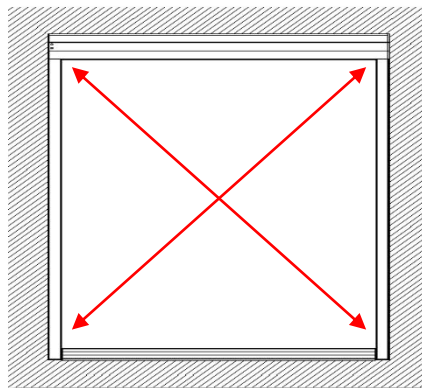

Diagonal size error is not more than 5mm