

# Installation tutorial

## Rubber waterstop FLOWSTOP 20 x 5 mm

TPE high-pressure swelling tapes Dim: 20 x 5 mm

article number: 010040



[Show product](#)



Product video in further  
languages




# Installation tutorial:




Only the system-compatible POWER swelling tape adhesive is suitable for installation.


**FLOWSTOP High-pressure swelling tape** must not be installed using swellingtape grid!

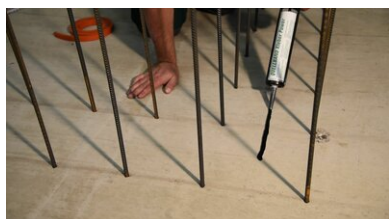


The substrate must be clean, dry, and free of loose particles. Apply the POWER swelling tape adhesive in a uniform bead (width 8-10 mm) out of the cartridge onto the surface.

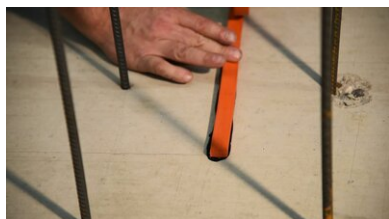

Once the POWER swelling tape adhesive has been applied in the centre of the joint, the **FLOWSTOP High-pressure swelling tape** is placed on the adhesive and gently pressed on, moving it slightly back and forth, crosswise to the longitudinal axis. When the tape is fixed, the adhesive should slightly ooze out on both sides. This guarantees a complete fixation.

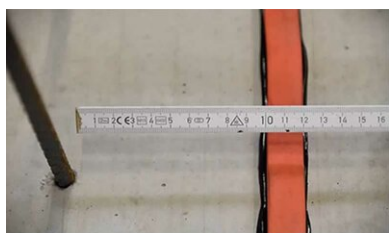

A concrete cover of 8cm must be ensured. **FLOWSTOP High-pressure swelling tape** must always be installed inside a two-sided connection reinforcement.

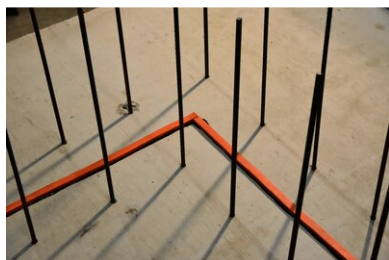

Both, straight and angle joints need to be butt jointed. The joint areas must be form-fit in order to avoid any discontinuity in the system.

Angle joint



Straight butt joint

Status: 23.03.2022